



The Joker (v13)
#21412-1

Thank you for purchasing a Lucky Duck™ Premium Decoy. To view additional products please visit your local sporting goods dealer or log on to our website at www.luckyduck.com.

1. Joker is a very easy to use product. Insert the 4AA batteries into the unit. Pay special attention to the battery leads (positive / negative rotation).
2. The stake is very strong, and has been knurled at the top, to help you get a good grip to tighten the stake or loosen the stake very easily.
3. Please note that the stake can be removed, and any camera Tripod can be screwed into the bottom of Joker, if you want Joker high, up off the ground.
4. To operate Joker: Turn unit on, choose fast or slow rotation speed on the unit (next to on/off switch), pull antenna out of remote control, and you are ready to go.
5. The remote is also very easy to operate. Push ON, to turn Joker on. Push OFF, to turn Joker off.
6. Please note, pushing off on the remote, does not turn Joker's electronics off. If your hunt is over, you will want to turn the ON/OFF switch on Joker, off.....to completely shut down the units electronics (save battery life).
7. Aux Port. This port is to be used with your Predator caller, that hopefully has an "Aux" function with the remote control that came with your caller. If your caller remote has an "Aux" button, you can plug your caller into the "AUX" port on The Joker (use 3.5mm phone jack cable), and run The Joker using your callers remote via the "Aux" button on your remote.

Warning: DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NI-CAD, NI-MH, ETC) BATTERIES.

Troubleshooting:

1. Unit won't turn on: If even one 4AA battery is inserted backwards, Joker will fail to turn on. Double check all batteries for correct positive, negative placement.
2. Be sure all 4AA batteries are not dead or low. Replace with new.
3. Remote wont turn Joker on or off. Make sure Antenna is pulled out all the way, and make sure you are not around any metal items that could interrupt the signal (indoors by TV's, etc)

Warranty:

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please call our customer service phone number at 715-338-3183.



Lucky Duck™

A Division of Expedite International, Inc.
1201 Beaudry Blvd. Hudson, WI 54016
www.luckyduck.com