



Air Dove™ (v14)
#63209-3

THE PREMIER WIND POWERED ROTATING WING DOVE DECOY

Thank you for purchasing a Lucky Duck™ Premium Hunting Accessory.

To view additional hunting products visit your local Sporting goods dealer or log onto www.luckduck.com

Parts List:
1 Dove body
1 pair of wings (left and right)
1 Wing Rod
1 Ground Stake

Step 1: Unpack box and make sure all parts are present.

Step 2: Slide the wing rod into the hole in one of the wings and aligning the flat slot on the rod with the thumb screw.

Step 3: Tighten the thumb screw.

Step 4: Slide the wing rod thru the mounting hole on the side of the Air Dove.

Note: There is a left and right wing. This is shown with an "L" and "R" on the appropriate wing.

Step 5: Slide the opposite wing onto the wing rod and aligning the flat slot on the rod with the thumb screw.

Step 6: Tighten the thumb screw.

Step 7: Connect the 2 piece stake using the threaded coupler.

Step 8: Press the stake into the ground.

Step 9: Mount the dove on top of the stake using the mounting hole in the dove body chest.

WARRANTY

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please call our customer service at 715-338-3183.

Lucky Duck™
A Division of Expedite International, Inc.
1950 8th Ave.
Baldwin, WI 54002
715-338-3183

