

Deception Geese #10018-9

Thank you for purchasing the Lucky Deception Series Collapsible Geese. To see more Lucky Duck™ products please visit your local Sporting Goods dealer or online at www.luckyduck.com.

The Lucky Deception Geese decoys are extremely realistic and the most versatile field decoy on the market. The decoys are lightweight and can be collapsed to save space and make transportation to and from your hunting spot much easier.

- 1. To expand the decoy unplug the valve and blow air into the valve. Plug the valve hole to maintain the decoy shape. If the decoy does not fully expand after long periods of storage, set the decoy in the sun for a few hours, blow warm air on the decoy using a hairdryer or run warm water over the decoy.
- 2. Using the footstep, insert the stake into the ground. The footstep is located on the bottom section of the stake.

 When removing the stake from the ground, pull up on the lower portion of the stake closest to the ground.
- 3. Set the decoy on the stake and secure the decoy bungee to the hook on the stake. Ring bases are available to purchase separately.

Note: To collapse the decoy unplug the valve and push the bottom of the decoy. Once collapsed plug the valve to maintain the collapsed shape.

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please call or email customer service at 715-338-3183 or customerservice@luckyduck.com.

Lucky Duck™

A Division of Expedite International Inc. 1950 8th Ave Baldwin, WI 54002 Customer Service 715-338-3183, customerservice@luckyduck.com www.luckyduck.com