



Lucky Field Flasher W/ Remote – 3 Pack #10518-4

Thank you for purchasing the Lucky Field Flasher W/ Remote – 3 Pack. The Field Flashers are a must have when hunting ducks, doves, pigeons or any other migratory bird that responds to wing flash. To see more Lucky Duck™ products please visit your local Sporting Goods dealer or online at www.luckyduck.com.

Directions for use:

Unpack box and make sure all parts are present.

Parts include: 3 – Lucky Field Flashers, 3 – Tripods, 3 Sets – Weighted Wings, 1 – HD Remote Transmitter.

Setup:

1. Install 4AA batteries into each Field Flasher.
2. Thread on tripod to each Field Flasher
3. Attach wings. Wings are weighted to eliminate the white side facing up when the flashers are turned off with the remote. Weights can be removed from the wings if needed.
4. Locate the on/off switch. Flip the switch to “On”. Wings should spin.
5. The master power switch located on the side of the remote control must be in the “On” position. Use the remote to control the field flashers.

Timer/On Model:

The field flashers can be operated in either on/remote mode or timer mode. Simply flip the switch on the right side of the unit to the respective mode.

- On/Remote mode – The flashers will run continuously. Use this mode to run the flashers continuously or controlled by the remote control. The remote can also be switched to “timer” mode on the remote control.
- Timer mode – The flashers will turn on and off randomly. Use this mode when not using a remote control or in states that do not allow the use of remote controls.

Remote Control: To program the remote to the field flasher follow the instructions below:

1. Turn the field flasher on.
2. Hold down the black sync button on the field flasher
3. While holding the sync button down, press the “On” button down on the remote. The light on the remote should flash. The remote is now programmed to the field flasher.
4. Repeat steps 1-3 for additional field flashers.

Note: One remote transmitter can control an infinite number of field flashers.

Check out our website and Youtube channel for additional product instructions.

Decoy Care and Maintenance

Lucky Field Flasher is not waterproof. Never submerge in water.

- If the Field Flasher becomes submerged make sure to dry the decoy and its internal components completely. Lightly spray the motor with a light gun oil or WD-40.
- Always remove the wings when storing the units.

Decoy Troubleshooting:

Decoy will not run

1. Check to make sure the batteries have a charge and are making a good connection.
2. Check the motor. With the wings attached spin the wings by hand. The wings should turn smoothly with minimal resistance. If the wings do not turn smoothly the motor may be burned out or have significant corrosion. Motors rarely burn out from normal use. Significant corrosion can occur if the decoy has been submerged.

Decoy vibrates when running

1. If the decoy vibrates enough to make significant noise make sure the wing adapters (piece that connects the wings to the motor shaft) are securely attached to the motor shaft. Some vibration is normal.
2. Make sure the wing shaft is straight. A bent wing shaft will cause significant vibration.

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please email or call customer service at customerservice@luckyduck.com or 715-338-3183.

Lucky Duck™

A Division of Expedite International Inc.
1950 8th Ave
Baldwin, WI 54002
Customer Service 715-338-3183
www.luckyduck.com

