



The Revolt #20017-9 v2

Thank you for purchasing The Revolt electronic caller. To see more Lucky Duck™ products please visit your local Sporting Goods dealer or online at www.luckyduck.com.

Directions for use: Unpack the box and make sure all parts are present.

- 1 – Revolt Electronic Call
- 1 – Remote Control
- 1 – Tripod Stand
- 1 – Antenna (inside handle)
- 1 – Decoy (inside handle)
- 1 – SD Card (installed)

Battery Installation: The call uses 10AA batteries (not included). The battery holder is located on the bottom of the call. Simply remove the battery cover, disconnect the battery holder if necessary, and install the batteries. The remote control uses 3AA batteries (not included). Remove the battery cover on the back of the remote control and install the batteries.

Antenna: The antenna will either be in the box or stored in the handle of the call. Simply locate the antenna port on the back right of the caller and screw the antenna onto the caller.

Decoy: The decoy will either be in the box or stored in the handle of the call. Insert the decoy into the hole on the top of the handle. Make sure to align the groove on the decoy with the slot on the decoy joint located in the handle. A strong magnet holds the decoy in place.

Tripod Base: Install tripod base on the bottom of the Revolt. The tripod base allows the caller to rotate to broadcast sound. Make sure to align the groove on the bottom of the Revolt with the slot on the tripod stand. A strong magnet holds the tripod to the caller. The tripod base can be disassembled to adapt to most standard camera tripods or any other base system that utilizes a ¼ 20 thread. This may be helpful if you want to elevate the call depending on the hunting terrain.

Electronic Call Operation: Flip the power switch on the electronic call forward to the “on” position. A red LED light on the side of the call will illuminate when the power is on. Hold down the power button on the remote control. The remote will turn on. The remote screen will display “Finding Caller” “Waiting” while it searches for the caller. Once connected the main caller the home screen will be displayed. On the bottom of the home screen it should say SD Link OK confirming the remote and caller are connected and in sync. **DO NOT PRESS ANY BUTTONS WHEN REMOTE IS SEARCHING FOR THE CALLER.**

Reboot: For 2018 and newer callers, a reboot function is available to resync the remote and call if the connection between the two is lost while hunting or the sound files are not displayed correctly. Simply press and hold the “auxillary” button to reboot the remote and resync. The remote screen should turn blue and go through the “Finding Caller” “Waiting” process as described in the Electronic Call Operation section above. **DO NOT PRESS ANY BUTTONS WHEN REMOTE IS SEARCHING FOR THE CALLER.**

Remote Control Operation:

Sound Selection – Use the up/down arrows to highlight the folder you want to select. Press the play/pause button to select the folder. Use the up/down arrows to highlight the sound you want to play. Press the play/pause button to play the sound. Holding the up/down arrows down for 1 second will cycle through the folders/sounds faster.

Volume Selection – Use the vol- and vol+ buttons to lower or increase the volume level. The volume level ranges from 1 to 32. Holding the vol- or vol+ buttons for 1 second will raise or lower the volume level quickly.

Back Button – The back button is used to go from the sound list back to the folder list.

Recall Button – The recall button will play the previous sound.

Display Screen – The remote display screen includes information on the top 2 lines as well as the bottom line.

Top Line (Left to Right)

- Stand timer which starts from zero when the remote is turned on
- Volume level from 1 – 32
- Remote control battery level indicator

Second Line (Left to Right): Each icon will be highlighted when in use

- AUX indicates if the auxiliary function is turned on
- SD indicates if the SD card is installed and synced to the remote
- Signal indicates the strength of the signal between the remote and caller
- Speaker indicates if a sound is being played

Bottom Line: Shows remote channels

Remote Screen Brightness: The Revolt features 3 different screen modes to adjust brightness depending on the outside light level. Simply press and hold one of the three scan buttons to change the mode. The top scan button is for “Day” mode, the middle scan button is for “Dawn/Dusk” mode and the bottom scan button is for “Night” mode.

Remote Control Distance: The Revolt utilizes industry leading remote technology which does not require a line of site between the remote and the caller up to at least 100 yards. Depending on conditions, remote distance may be significantly greater than 100 yards.

Decoy Operation:

“D” Button – Press the “D” button to turn the decoy on. The decoy will spin back and forth.

“S” Button – Press the “S” button to control the speed of the decoy. There are 3 speed settings.

Scan Operation:

Top/Bottom Scan Buttons – Press either button to rotate the call left or right. Press the button again to stop the call.

Middle Scan Button – Press this button to cover 180 degrees. The call will rotate 90 degrees to the left, 180 degrees to the right, and back 90 degrees to the left which will be the approximate starting position. If you need to stop the call while rotating, simply press the scan button again.

The scan buttons are a great way to broadcast sound to a large area. The Revolts powerful 30 watt/30 amp speaker system is designed to extend sound long distances in one direction. Using the scan function will broadcast sound to a large area calling in predators from a greater distance than most calls.

Favorite Buttons: F1-F4 are designed to store your four favorite sounds for quick access when hunting. Press the F1 through F4 button once to play the programmed sound at the predefined volume level.

Program F1 through 4 – Simply highlight the sound you want to program as a favorite and adjust the volume to your preferred level. Hold down the corresponding F1 through F4 button. The highlighted sound will flash on the display screen confirming the programming is complete. IF THE F1 BUTTON WILL NOT PROGRAM, TRY PROGRAMMING F2, F3 OR F4 FIRST AND THEN PROGRAM F1.

Gain Control: Unique to the Revolt is a four stage gain control function. The gain on this caller has four settings (1-4). One being the lowest and four being the highest (loudest). Whenever the caller is turned on it is set to gain level of “3”. By adjusting the gain, you are able to control the power running through the amp. You will notice a difference in the volume of the call between level 1 and level 4. Certain sound frequencies sound much better at a high gain where others sound better at a low gain. Knowing you may be adding your own sounds to this caller, adjusting the gain may be useful depending on the sound being played since each sound recording is different. Adjusting the gain may also be useful depending on the hunting situation. For example, turning the gain to level 4 in strong wind conditions may be beneficial even if the sound quality is reduced (i.e. distortion).

Adjust Gain – Press the G key to cycle through the gain levels. The gain level will display on the display screen.

Auxiliary Function: The Revolt is designed with an auxiliary function which allows a separate decoy to be controlled remotely by connecting a compatible decoy (not included) to the back of the caller using a 3.5mm cord (not included). Simply plug one end of the 3.5mm cord into a compatible decoy and the other end into the auxiliary port on the back of the caller. Turn on the compatible decoy and the caller/remote. The auxiliary button “AUX” on the remote will now turn the compatible decoy on and off. The AUX icon on the top of the display screen will be highlighted when the auxiliary function is used.

Channel Selection: The Revolt is equipped with four channels to allow multiple Revolt speaker units (sold separately) to be controlled independently with one remote. For example, four separate speaker units could each be on their own

channel playing different sounds but be controlled by the same remote. Also four (or more) separate speaker units could be on the same channel playing the same sound and be controlled by one remote. This gives the hunter many different setup options for predator hunting and snow goose hunting.

Select a Channel – Each speaker unit (“call”) has a channel selector on the right side of the call. The remote and call are preset to channel 1. **WHEN USING ONE CALL ALWAYS HAVE THE CHANNEL SELECTOR ON CHANNEL 1. WHEN USING MORE THAN ONE CALL, ONE OF THE CALLS MUST BE ON CHANNEL 1.**

1. Set call to channel 1 and turn on
2. Turn on remote and let the remote sync to the call
3. Set the second call to channel 2 and turn on the call
4. Change remote to channel 2. The channels will be listed at the bottom of the remote screen, simply press the “CH” button to highlight channel 2 and press “CH Set” to set the remote to channel 2.
5. Repeat the process to add additional calls on different channels.
6. Simply change the channel on the remote to control the specific calls on each channel.

Sound Management: The Revolt comes preloaded with 100 live animal sounds organized in 17 folders for quick access. These sounds have been professionally recorded by The Verminator, Rick Paillet. We firmly believe this is the best sound library on the market. The 100 preloaded sounds have the extension .LD. They will only play on Lucky Duck electronic calls. **Any reproduction of these sounds is strictly prohibited.** Check out www.luckyduck.com for additional sounds to purchase.

Add/Remove Sounds: The Revolt features an industry leading wireless 2 way communication system between the remote and caller. This makes syncing the caller to the remote extremely easy and quick.

1. Press the SD sound card in to eject the sound card and remove the SD sound card from the back of the caller
2. Add or remove the folders and sounds on the SD sound card using your computer. View the files just like you would view files on a standard camera sd card.
3. Reinstall the SD sound card into the caller (top side or label side of the SD card should face the left side of the caller when reinstalling)
4. Turn on the caller and remote and let them sync with each. Most syncs will take 5-30 seconds. As stated in the “Electronic Call Operation” section, the remote screen will display “Finding Caller” “Waiting” while it searches for the caller. Once connected the remote screen will display “Updating” and “Communication OK”. The main home screen for the caller screen will then display.

It is important to note the maximum number of sounds are 2,000 and the maximum number of folders are 32. There can only be one level of folders. You cannot create a folder within a folder. The file names can be as long as you would like but the display screen will only show the first 20 characters. The caller will play .LD, and .mp3 files.

Charging Port: The Revolt is equipped with a charging port which is only to be used with the Lucky Duck Revolt battery packs and chargers (sold separately). The charging system is not to be used with any other types of battery packs or chargers. Use of any other battery packs or chargers voids all warranties.

Caller Buttons on Main Unit: The Revolt includes play/pause, volume and favorite buttons on the caller in case the remote is lost or you want to use the caller without the remote.

Care and Maintenance

1. The Revolt is not waterproof. Take caution to keep rain and snow away from the caller and remote. If the caller or remote becomes wet make sure to dry it off/out.
2. There is a small drain on batteries even when the power is off. It is recommended to remove the batteries from the remote and disconnect the battery pack from the caller between hunts to extend battery life.
3. The caller has a remote control storage adapter located on the left side of the caller. Insert the remote clip into the storage adapter. Do not transport the remote in the storage adapter as the remote may come unattached.

Troubleshooting:

1. ALWAYS MAKE SURE THE CALLER IS SET TO CHANNEL ONE BEFORE POWERING ON THE UNIT.
2. If the caller or remote does not seem to be operating properly or the sync function does not seem to be working after changes have been made to the SD sound card, turn the caller and remote off and remove the batteries from each unit. Reinstall the batteries and turn the remote and caller back on as described in the operations section.
3. For 2018 and newer callers, a reboot function is available to resync the remote and call if the connection between the two is lost while hunting or the sound files are not displayed correctly. Simply press and hold the “auxillary” button to reboot the remote and resync. The remote screen should turn blue and go through the “Finding Caller” “Waiting” process as described in the Electronic Call Operation section above. **DO NOT PRESS ANY BUTTONS WHEN REMOTE IS SEARCHING FOR THE CALLER.**

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (water damage, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please email or call customer service at customerservice@luckyduck.com or 715-338-3183.



The Revolt Layout

