



## Lucky HD™ #10015-8

Thank you for purchasing the Lucky Duck HD™ Premium Decoy. To see more Lucky Duck™ products please visit your local Sporting Goods dealer or online at [www.luckyduck.com](http://www.luckyduck.com).

### Directions for use:

Step 1: Unpack box and make sure all parts are present.

Parts include:

- 1 – Lucky HD body
- 2 – Wings
- 1 – 6 Volt Rechargeable Battery
- 1 – 6 Volt Charger with port and alligator leads
- 1 – 3pc Mounting Stake

Charge your battery before use. A fully drained battery will take approximately 8-10 hours to fully charge.

### To Recharge the 6 Volt Battery (two methods):

#### Decoy Port:

Step 1: Simply plug your charger into the charging port located under the decoy.

Step 2: Plug the charger into a wall outlet. The LED light on the charger will turn red during charging and green once the battery is fully charged.

#### Battery Directly:

Step 1: Remove the battery from the module under the decoy and remove the wires from the battery.

Step 2: Connect the red clip on the charger to the red battery post and the black clip to the black battery post.

Step 3: Plug the charger into a wall outlet. The LED light on the charger will turn red during charging and green once the battery is fully charged.

### Battery installation:

Step 1: Locate the battery box on the underside of the decoy. Squeeze the retaining clips together and pull the battery box out of the decoy.

Step 2: Place the battery into the battery box and secure the battery in place using the velcro strap. The velcro should be tight to the battery.

Step 3: **DO NOT CROSS THE TERMINAL WIRES:** Two wires (1 red and 1 black) will be exposed once the battery box is removed. If you do not see the red and black wires they may still be inside the decoy. Simply locate them inside the decoy and move the wires to the outside of the decoy body. Attach the red lead wire to the positive battery terminal (Red Terminal on Battery) and attach the black lead wire to the negative battery terminal (Black Terminal on Battery).

Step 4: Insert the battery box into the bottom of the decoy. The battery box will only go into the decoy one way. Align the section of the pole mount hole on the battery box with the pole mount hole on the decoy and snap into place.

Step 5: Turn on the rocker switch to test that the battery has made a good connection. The motor should spin in a counter clockwise direction.

Note: If you have crossed the red and black wires to the battery terminals the motor will spin clockwise and may blow the fuse. The fuse is located on the red wire for the battery and can be unscrewed and replaced very easily.

### **Wings:**

Step 1: Attach the magnetic wings to the motor shafts by simply inserting them into the black magnetic sockets on each side of the decoy. Align the notch on the wings to the slot on the decoy wing shaft.

Step 2: Always remove the wings from the decoy if not mounted on the three piece pole to minimize any potential wing damage from handling.

### **Three piece pole:**

Step 1: The 3 pc pole has a top ("T" handle), middle and bottom section (pointed end). Simply slide each section into the other until the metal push pin pops into the corresponding hole.

### **Mounting three piece Pole into the decoy:**

Step 1: Insert the top pole into the hole in the module under the decoy.

Step 2: Secure the decoy to the metal pole by strapping the orange cord around the horizontal "T" handle.

Note: Lucky Duck offers a 5' extension kit to add length to your decoy pole. Multiple extension kits can be joined together.

Lucky Duck also offers a tripod stand that works well on frozen or hard terrain and sits roughly 18" high. The middle and top portion of the included stake can be used with this tripod to increase the height of the duck.

To purchase an extension kit or tripod stand check with your local sporting goods store or log on to [www.luckyduck.com](http://www.luckyduck.com).

**Hunt:** Turn the switch on (under decoy by tail) and you are ready to hunt.

### **Care and Maintenance**

Lucky HD is not waterproof. Never submerge in water.

1. If Lucky HD becomes submerged make sure to dry the decoy and its internal components completely. You may need to remove the underbody module from the decoy. See the troubleshooting section below regarding excessive vibration on how to remove the module. Lightly spray the motor with a light gun oil or WD-40. Try turning the decoy on.
2. Always remove the wings if the decoy is not mounted to the three piece pole and store the wings in a safe place to reduce the possibility of damage.
3. Always charge the battery before storage and do not leave the wire leads attached to the battery while in storage.
4. Clean your Lucky HD using warm soapy water and a clean soft rag. Never use abrasives or harsh chemicals as this will damage the paint.
5. Store Lucky HD in an above freezing dry environment during the off season.
6. Always wipe Lucky HD dry after use.

### Troubleshooting:

- Battery is charged but the decoy has stopped running:
  1. Ensure the remote control “dummy” plug is securely installed. In the front of the decoy module (under decoy and towards the head) you will see a small piece of plastic that is inserted into the module. This is a “dummy” plug where a remote control kit (not included) would be installed. This plug needs to be securely installed for the decoy to run.
  2. Simply pull the “dummy” plug out and push it back in firmly.
- Decoy vibrates significantly after many hours of use:

The wing adapter set screws on motor shaft may need to be retightened as these can loosen after many hours of use. You will need a small phillips head screwdriver and a strong light source.

  1. Remove the battery box from the decoy and disconnect the battery.
  2. Remove the screws that attach the bottom module to the decoy.
  3. Remove the module from the decoy. Pull towards the rear of the decoy as this will disengage the lip under the front of the module from the decoy.
  4. Once the module is off carefully pull out the two wires that are plugged into the module. Make note of which wire is attached to each terminal of the module.
  5. The module is now completely removed from the decoy. Inside the decoy you will see the two black wing adapters that are attached to the motor shafts. Rotate these adapters until you see the small phillips screws.
  6. Tighten these two screws and reassemble the module in reverse order. Do not forget to plug the two wires back into the module.

**Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please call customer service at 715-338-3183.**



**Lucky Duck™**  
A Division of Expedite International Inc.  
1950 8<sup>th</sup> Ave  
Baldwin, WI 54002  
Customer Service 715-338-3183  
[www.luckyduck.com](http://www.luckyduck.com)

Licensed under one or more of the following patents: 6408559, 6508028, D46915