



Lucky Air Force #10417-0

Thank you for purchasing the Lucky Air Force. To see more Lucky Duck™ products please visit your local Sporting Goods dealer or online at www.luckyduck.com.

Directions for use:


Step 1: Unpack box and make sure all parts are present.

Parts include:

- 1 – Mallard Drake body
- 2 – Flat Pull String Wings
- 2 – Curved Wind Wings
- 1 – 3pc Mounting Stake
- 1 – Pull String Handle with 100' of String
- 2 – Extra Tension Bands



Wind Operation

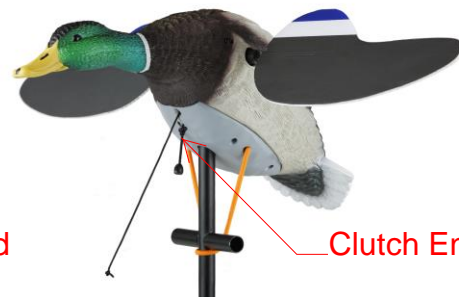

Pull String Operation

Wind Operation:

- Step 1: Attach the **curved** magnetic wings to the motor shafts by simply inserting the wings into the black magnetic sockets on each side of the decoy. Align the notch on the wings to the slot on the decoy wing shaft.
- Step 2: Always remove the wings from the decoy if not mounted on the three piece pole to minimize any potential wing damage from handling.
- Step 3: Ensure the clutch string is not engaged and wings spin smoothly.
- Step 4: Ensure the decoy faces into the wind.

Pull String Operation:

- Step 1: Attach the **flat** magnetic wings to the motor shafts by simply inserting the wings into the black magnetic sockets on each side of the decoy. Align the notch on the wings to the slot on the decoy wing shaft.
 - Step 2: Always remove the wings from the decoy if not mounted on the three piece pole to minimize any potential wing damage from handling.
 - Step 3: Ensure the clutch string is engaged and wings spin smoothly when the pull string is pulled. There is a knot about 2" from the end of the clutch string that will slide into the notch on the module to keep the clutch engaged.
 - Step 4: Ensure the decoy faces the direction of the person controlling the pull string.
 - Step 5: Connect the pull string on the handle to the drive string on the decoy. Let out enough string to your hunting location.
 - Step 6: Once the decoy is mounted on the pole, short easy pulls of the string will turn the wings smoothly.
- Note: When storing the decoy we recommend the clutch not be engaged so the drive shaft spins smoothly.

Three piece pole:

Step 1: The 3 pc pole has a top ("T" handle), middle and bottom section (pointed end). Simply slide each section into the other until the metal push pin pops into the corresponding hole.

Mounting three piece Pole into the decoy:

Step 1: Insert the top pole into the hole in the module under the decoy.

Step 2: Secure the decoy to the metal pole by strapping the bungee cord around the horizontal "T" handle.

Note: Lucky Duck offers a 5' extension kit to add length to your decoy pole. Multiple extension kits can be joined together.

To purchase an extension kit check with your local sporting goods store or log on to www.luckyduck.com.

Check out our website and Youtube channel for additional product instructions.

Decoy Care and Maintenance

Lucky Air Force is not waterproof. Mechanical parts are inside the decoy. Never submerge in water.

1. If the decoy becomes submerged make sure to dry the decoy and its internal components completely. You may need to remove the underbody module from the decoy. Lightly spray the metal parts with a light gun oil or WD-40. Try engaging the pull string operation.
2. Always remove the wings if the decoy is not mounted to the three piece pole and store the wings in a safe place to reduce the possibility of damage.
3. Always wipe the decoy dry after use.
4. Store the decoy in an above freezing dry environment during the off season.

Decoy Troubleshooting:

- Clutch is engaged but the decoys wings will not spin when the drive string is pulled:
 1. Remove the module from the decoy (4 screws) and check the tension band. Over time the tension band may wear out or break. Simply replace the tension band with the replacement bands supplied in the package. A small flathead screw driver may be useful for connecting the band to the slot on the drive shaft. See our website or Youtube page for a video illustration.

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please call customer service at 715-338-3183.

Lucky Duck™

A Division of Expedite International Inc.
1950 8th Ave
Baldwin, WI 54002
Customer Service 715-338-3183
www.luckyduck.com

Patent Pending