



## Lucky HD™ Blue Wing Teal #10218-3

Thank you for purchasing the Lucky HD™ Blue Wing Teal. To see more Lucky Duck™ products please visit your local Sporting Goods dealer or online at [www.luckyduck.com](http://www.luckyduck.com).

### Directions for use:

Step 1: Unpack box and make sure all parts are present.

Parts include:

- 1 – Lucky HD Teal body
- 2 – Wings
- 1 – 3pc Mounting Stake

### 4 AA Battery Installation:

Step 1: Remove the battery cover from the module under the decoy.

Step 2: Install 4AA batteries taking note of the proper terminal location. The negative or flat part of the battery always goes against the coil spring.

Step 3: Install the battery cover.

Step 4: Turn on the rocker switch to test that the battery has made a good connection. The motor should spin in a counter clockwise direction.

Note: If you have installed the batteries incorrectly the fuse may blow. The fuse is located on the red wire inside the module and can be accessed by separating the module from the decoy. Simply unscrew the fuse holder and replace the 3 amp fuse.

### Wings:

Step 1: Attach the magnetic wings to the motor shafts by simply inserting the wings into the black magnetic sockets on each side of the decoy. Align the notch on the wings to the slot on the decoy wing shaft.

Step 2: Always remove the wings from the decoy if not mounted on the three piece pole to minimize any potential wing damage from handling.

### Three piece pole:

Step 1: The 3 pc pole has a top (“T” handle), middle and bottom section (pointed end). Simply slide each section into the other until the metal push pin pops into the corresponding hole.

### Mounting three piece Pole into the decoy:

Step 1: Insert the top pole into the hole in the module under the decoy.

Step 2: Secure the decoy to the metal pole by strapping the black cord around the horizontal “T” handle.

Note: Lucky Duck offers a 5’ extension kit to add length to your decoy pole. Multiple extension kits can be joined together.

Lucky Duck also offers a tripod stand that works well on frozen or hard terrain and sits roughly 18” high. The middle and top portion of the included stake can be used with this tripod to increase the height of the duck.

To purchase an extension kit or tripod stand check with your local sporting goods store or log on to [www.luckyduck.com](http://www.luckyduck.com).

**Hunt:** Turn the switch on (under decoy by tail) and you are ready to hunt.

**This decoy does not come with a remote control. The Lucky HD Remote Kit (10415-6) may be purchased separately and installed in this decoy. Installation instructions are included below.**

## Decoy Care and Maintenance

Lucky HD is not waterproof. Never submerge in water.

- If Lucky HD becomes submerged make sure to dry the decoy and its internal components completely. You may need to remove the underbody module from the decoy. Lightly spray the motor with a light gun oil or WD-40.
- Always remove the wings if the decoy is not mounted to the three piece pole to reduce the possibility of damage.
- Remove batteries before storage.
- Clean your Lucky HD using warm soapy water and a clean soft rag. Never use abrasives or harsh chemicals.
- Store Lucky HD in an above freezing dry environment during the off season.

## Decoy Troubleshooting:

### Decoy will not run

1. Ensure the “dummy” plug is securely installed. In the front of the decoy module (under decoy and towards the head) you will see a small piece of plastic that is inserted into the module. This is a “dummy” plug where a remote control kit (not included) would be installed. **This plug needs to be securely installed for the decoy to run.**
2. Check the motor. With the wings attached spin the wings by hand. The wings should turn smoothly with minimal resistance. If the wings do not turn smoothly the motor may be burned out or have significant corrosion. Motors rarely burn out from normal use. Significant corrosion can occur if the decoy has been submerged.
3. Make sure the batteries are installed correctly and making good connection with the terminals on the battery cover.
4. Check the switch. Turn the switch on/off a few times to remove any residue on the switch contacts. If the decoy still does not turn on carefully remove the entire module from the decoy body (4 screws). Keep the motor wires and battery connected. Locate the backside of the on/off switch and unplug the two wires going to the switch. Touch the terminal ends of the two wires together. If the decoy turns on the switch is bad. If the decoy does not turn on the module is bad. Replace as needed.

### Decoy vibrates when running

1. If the decoy vibrates enough to make significant noise make sure the wing adapters (piece that connects the wings to the motor shaft) are securely attached to the motor shaft. Some vibration is normal.
2. Make sure the wing shaft is straight. A bent wing shaft will cause significant vibration.

**Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please email or call customer service at [customerservice@luckyduck.com](mailto:customerservice@luckyduck.com) or 715-338-3183.**

### **Lucky Duck™**

A Division of Expedite International Inc.  
1950 8<sup>th</sup> Ave  
Baldwin, WI 54002  
Customer Service 715-338-3183  
[www.luckyduck.com](http://www.luckyduck.com)

Patent Pending and Licensed under one or more of the following patents: 6408559, 6508028, D46915

