

## Lucky Junior v13.1 #20012-4

Thank you for purchasing a Lucky Duck™ Hunting Product. To view additional Lucky™ Duck products, please visit your local sporting goods dealer or log on to our website [www.luckyduck.com](http://www.luckyduck.com)

Included in the box:

- 1) Mallard duck body
- 2) 3 pc. Mounting stake with T bracket
- 3) (2) 4-AA battery packs
- 4) (1) Set of Lucky Junior wings
- 5) (1) set of feet with wing nuts
- 6) Lucky Junior is Remote Ready (Transmitter & receiver needed-Item#21312-4 Pro Series Waterfowl Remote Kit-sold separately)

Set up of Lucky Junior is quite simple. The first thing you will want to do is install 4-AA batteries into one of the (2) provided battery packs. **NOTE: DO NOT MIX OLD & NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (carbon zinc) OR RECHARGEABLE (ni-cad, ni-mh, etc) BATTERIES.** Attach the battery pack snap to the wire harness snap, just like you would attach a 9V battery in other products (See fig. 1 below). After connection to the wire harness, slide the battery pack into the provided protective bag (See fig. 2 below).



Figure 1

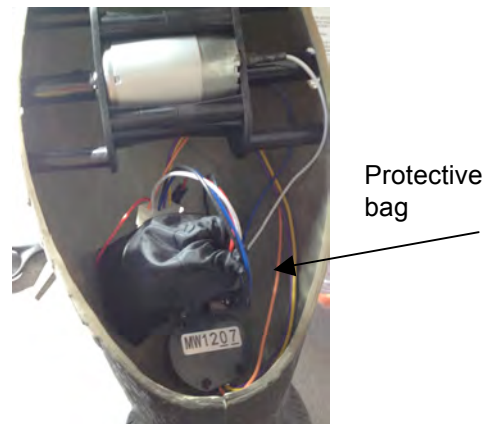


Figure 2

- 1) Locate the feet and attach to the T-shaped mounting bracket found inserted in the top of one of the metal stake sections.
- 2) Remove the protective rubber covers from the threaded shafts that protrude from the legs.
- 3) Slide each of the feet over the threaded studs that come out of the legs on the duck body.
- 4) Slide the metal T-shaped mounting bracket over the studs and secure with provided wing nuts as indicated in the Figure 3 below.

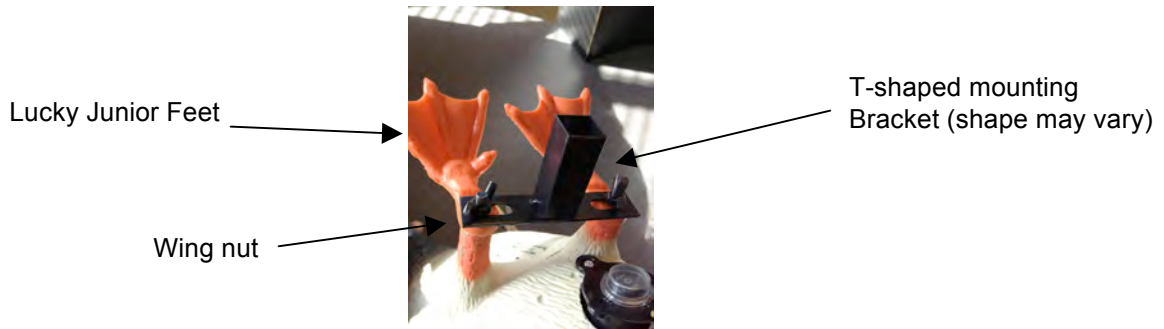


Figure 3

- 5) The 3 pc stake has a top (for T stake), middle and bottom section(pointed end). Simply slide each section into the other, until the metal ball clip, pops into the corresponding hole. Insert the metal T-Shaped mounting bracket, on the top pole until the metal ball clip pops into the corresponding hole.

#### **Installing the wings:**

- (1) Lucky Junior Wings are held in place by a internal magnet for safe and secure operation.
- (2) Simply slide the wings into the black motor axles, (flat surface to flat surface) all the way in until the wing engages the embedded magnets inside the black metal motor shafts.

#### **Turning the unit ON:**

On the bottom of the tail is a rocker switch. Press the switch forward and the wings will start to flap. The other rocker switch location, is for remote control operation (sold separately).

#### **Troubleshooting:**

If your decoy does not want to run when the switch is turned on, check the following items before calling technical support.

- 1) Are your batteries low, or one battery reversed in its location ?
- 2) Is there a wire disconnected from the battery or the motor?
- 3) Is your fuse blown?

If you have checked all the above things and are still having problems, feel free to call us at Lucky Duck™ Tech Support, 715-338-3183

#### **WARRANTY**

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please call customer service at 715-338-3183.



**Lucky Duck™**  
*A Division of Expedite International Inc.*  
 1950 8<sup>th</sup> Ave  
 Baldwin, WI 54002  
 Customer Service 715-338-3183  
 www.luckyduck.com