



Lucky Flocker #11316-5 v17.2

Thank you for purchasing the Lucky Flocker. To see more Lucky Duck™ products please visit your local Sporting Goods dealer or online at www.luckyduck.com.

The Lucky Flocker was designed to be the most durable and mobile rotary machine on the market. It features a rugged motor and gear system to drive your 2 or 4 arm setup. It also has a quick set quad spike stand for easy setup and quick changes to your spread. In addition, there is a remote control for ease of use and flexibility if other fowl is in the area. The Flocker rotary machine is effective on snow geese, ducks, doves, pigeons and other gamebirds. It works with most flyers on the market including Lucky Duck, Sillosocks, Reel Wings, Heavy Hauler and Deadly Decoys. You can also adapt the Flocker to work with Lucky Duck air and battery powered decoys as well as other motorized decoys.

Included Items:

- 1 – Flocker Motor Unit
- 10 – Rod Extensions (2 extra)
- 5 – Rod Tips (1 extra)
- 4 – Legs
- 1 – Hub for Legs
- 1 – Center Spike with T-Handle
- 5 – Washers and End Caps (for use with Reel Wing decoys or any “hanging” style decoy)
- 1 – Carrying Bag (for arms, rods and legs only)
- 1 – HD Remote Transmitter

Setup:

Step 1: Attach the legs to the hub to create a stand.

Step 2: Slide the spike with t-handle (pointed end first) through the top of the hub. Push the spike into the ground using the t-handle to secure the stand. Tighten the thumb screw to remove any play.

Step 3: Slide the motor unit onto the pole section above the t-handle and tighten the thumb screw.

Step 4: Attach 2 rod extensions and 1 rod tip together to create 1 rod arm using the push pins.

Step 5: Repeat step 4 so you have 4 rod arms (2 rod extensions and 1 rod tip per arm).

Step 6: Attach the rod arms to each of the four angled motor hub receivers using the push pins. The unit can be used with 2 arms or 4 arms. If using 2 arms make sure the arms are located across from each other to balance the weight.

Step 7: The vertical hub receiver can be used to mount decoys with additional rod extensions.

Step 8: Attach the decoys to the rod tips. Rod tips should be turned upward for most flyer decoys. Turn the rod tips parallel to the ground for Reel Wing decoys and other “hanging” style decoys.

Step 9: Attach the red alligator clip to the (+) battery terminal and black alligator clip to the (-) battery terminal. We recommend using a 12 volt marine/rv deep cycle battery for extended run time. The Flocker only runs on a 12 volt battery.

Note: When using in 10+ mph winds or uneven ground use the included cam buckle strap for greater stability. Simply attach the tie down strap to a ground anchor (not included) or use a 12V deep cycle battery. To use a 12V battery, position the battery between the Flocker stand. Run the strap underneath the battery and connect each “S” hook to the square pole above where the legs snap into the leg hub. Pull the strap tight.

Step 10: Turn the unit on using the speed control on the motor unit. BE CAREFUL OF THE ARMS ROTATING WHEN THE UNIT IS TURNED ON. Adjust the speed to the desired level.

Remote Control Operation: Once the Flocker is turned on and the speed is set, use the remote to turn the Flocker on and off. Multiple Flockers can be controlled by one remote control. To program one remote to multiple Flockers follow the steps below.

- 1) Connect the Flocker to a power source and turn the unit on so the motor is turning.
- 2) Locate the sync button located on the bottom of the control module close to where the battery cables exit the module.
- 3) Hold the sync button down. At the same time press and hold the on or off button on the remote. The Flocker should turn off when synced (1-2 seconds). Press the on button to confirm the remote is synced to the Flocker. Repeat the steps with other Flocker units using the same remote transmitter.
- 4) The remote transmitter has a slider switch labeled "Timer". The off mode allows the Flocker to run continuously. The on mode turns the Flocker on and off at random intervals. It is recommended the Flocker be ran in off mode.

Using Reel Wing Decoys and other "hanging" style decoys: Simply slide the washer on the rod tip and install the push cap. Connect the decoy to the off-center hole in the washer using a barrel swivel/fishing leader style device.

We do not recommend using the Flocker in 20+ mph winds.

Troubleshooting:

- It is recommended to use a 12V deep cycle battery to power the battery. Ensure the battery is properly maintained to operate the Flocker.
- If the remote control does not appear to be working check the battery in the remote control by simply pressing the on or off button on the remote. The red led light at the top of the remote should illuminate. If it does the remote has power. If it doesn't the battery needs to be replaced. Battery size is 12v23A and can be found at most battery stores.

Parts and Accessories: To purchase parts and accessories visit www.luckyduck.com.

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please call customer service at 715-338-3183.

Lucky Duck™
A Division of Expedite International Inc.
1950 8th Ave
Baldwin, WI 54002
Customer Service 715-338-3183
www.luckyduck.com

