

## Triple Play Motion Pigeons v13.1 #76811-2

Thank you for your purchase of a Lucky Duck™ Premium Decoy. To view additional Lucky Duck™ products, visit your local Sporting Goods dealer or log on to www.luckyduck.com.

You will have the following components:

- 1. (3) Wood pigeon decoy bodies
- 2. (3) Removable decoy actuating arms
- 3. (1) Base hub
- 4. (1) Carry bag

To assemble the decoy, follow the simple steps below.

- 1) Turn the base hub upside down exposing the battery cover. Remove the battery cover and install (4) AA batteries. Negative battery terminal faces the spring. Battery orientation is also molded into the inside of the battery box for reference. Replace the battery cover.
- 2) **Warning:** DO NOT MIX OLD AND NEW BATTERIES. DO NOT MIX ALKALINE, STANDARD (CARBON-ZINC), OR RECHARGEABLE (NI-CAD, NI-MH, ETC) BATTERIES.
- In the field, you will press the spikes on the bottom of the base into the ground in a desired location. Try to choose a level location for set up.
- 4) Install the 3 wire arms as indicated in the photos below. They simply snap into the base.





5) Place the (3) pigeon bodies, one on the end of each arm. There is a hole in the chest of the pigeon. You just simply slide the hole in the chest over the end of each arm. Fully assembled it should look similar to the image below.



6) Turn the ON/OFF switch to the ON position and start the decoy system.

NOTE: Decoy system rotates with an intermittent timer. Moves-then stops. Once stopped decoys spin back & forth as if feeding on the ground.

Lucky Duck™ warrants this product against all manufacturing defects for a period of 1 year from date of purchase. Proof of purchase is required. Abuse of the product (submerged in water, dropped, mistreatment etc.) is not covered. Please return and exchange the defective unit to the store where you purchased the product. If the store will not accept the return, please call customer service at 715-338-3183.

